



Illustrated Parts List

Model Series

20S200

TYPE NUMBERS
0035 through 1533.

TABLE OF CONTENTS

Air Cleaner	5
Alternator	10
Blower Housing/Shrouds	7
Camshaft	2
Carburetor	4
Controls	8
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	9
Exhaust System	6
Flywheel	7
Fuel Supply	8
Gasket Set - Engine	3
Gasket Set - Valve	3
Gear Reduction	9
Governor Spring	8
Ignition	10
Kit-Carburetor Overhaul	4
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	7
Valves	3
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL










REQUIRED when replacing parts with warning labels affixed.

1036 EMISSIONS LABEL





1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL

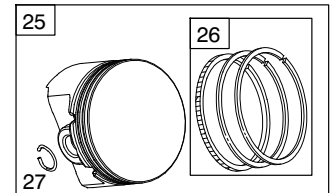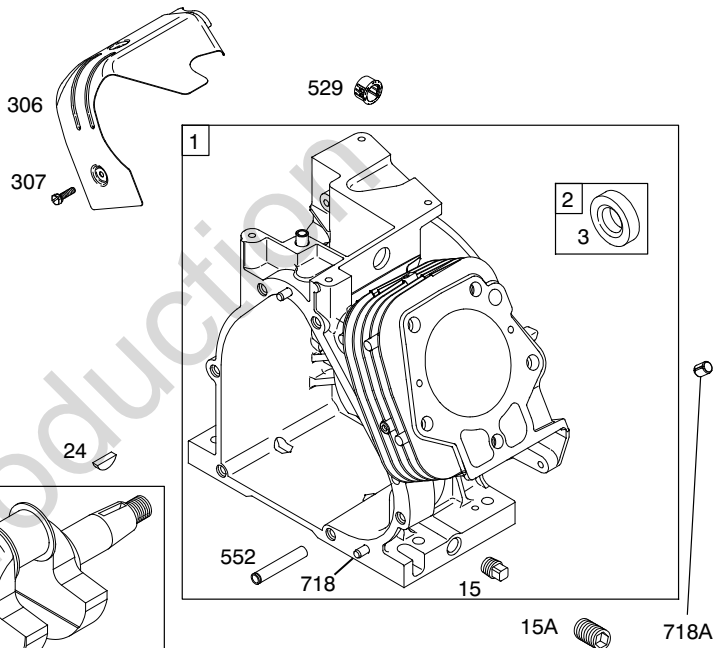
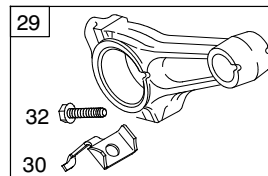
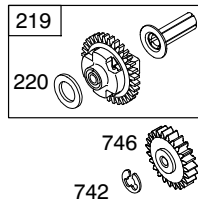
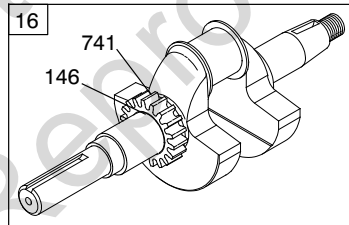
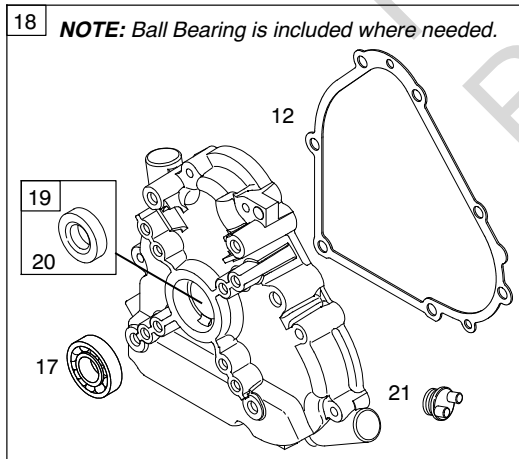
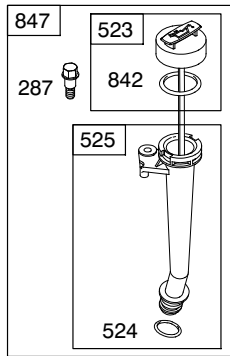


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 10003-2 Assemblies include all parts shown in frames. 03/15/2013

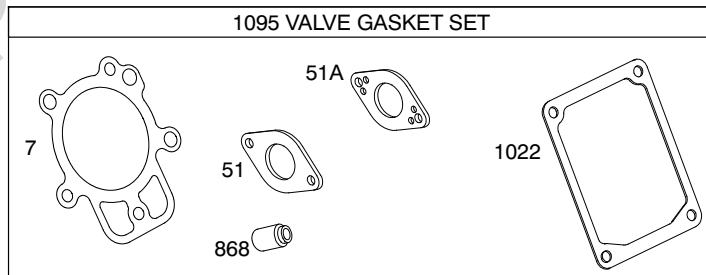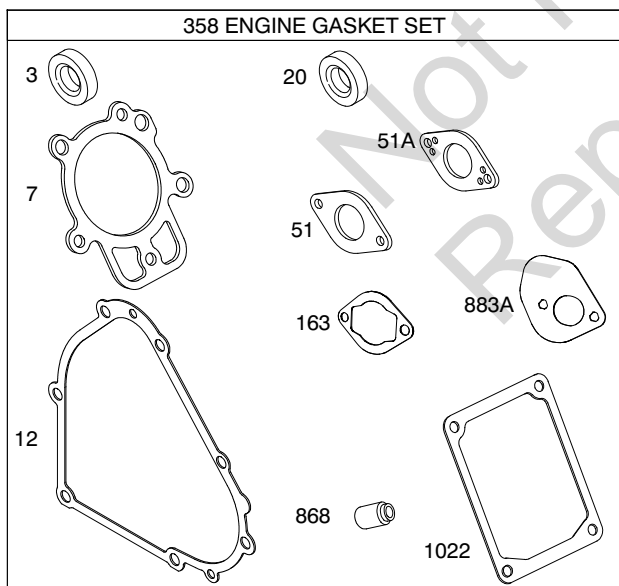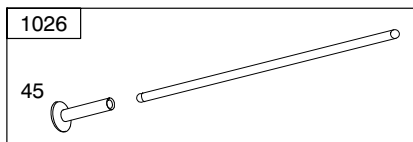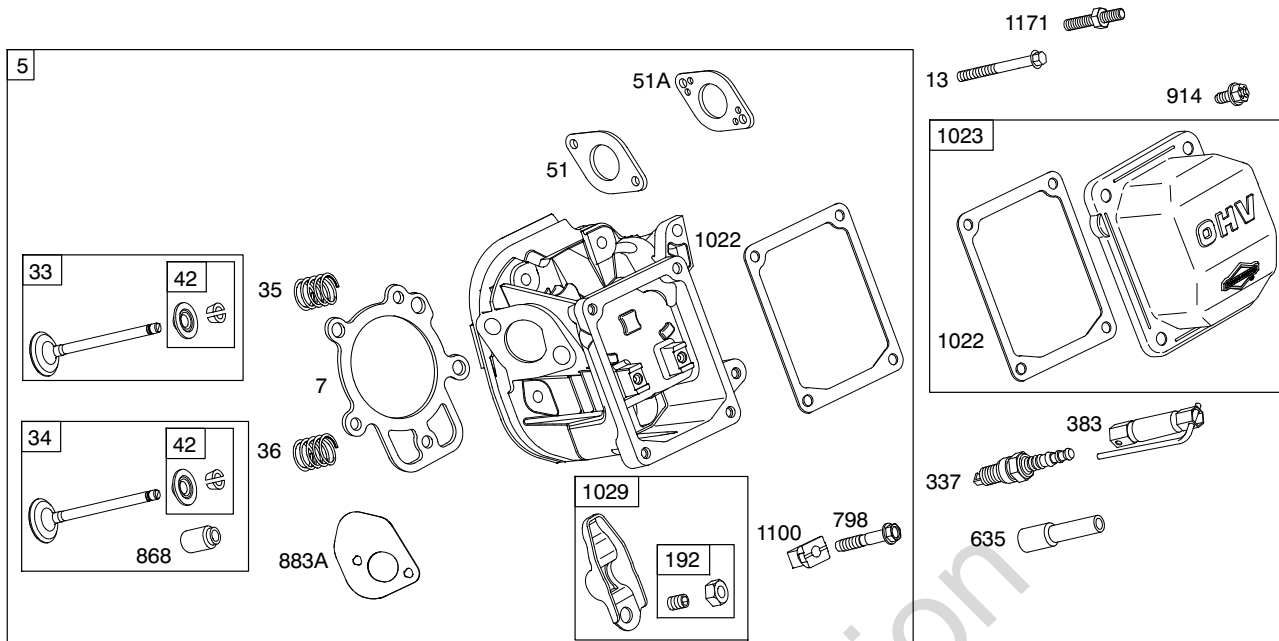


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10003-3 Assemblies include all parts shown in frames. 03/15/2013








20S200

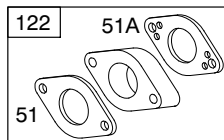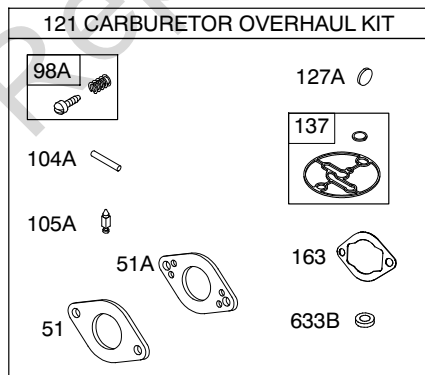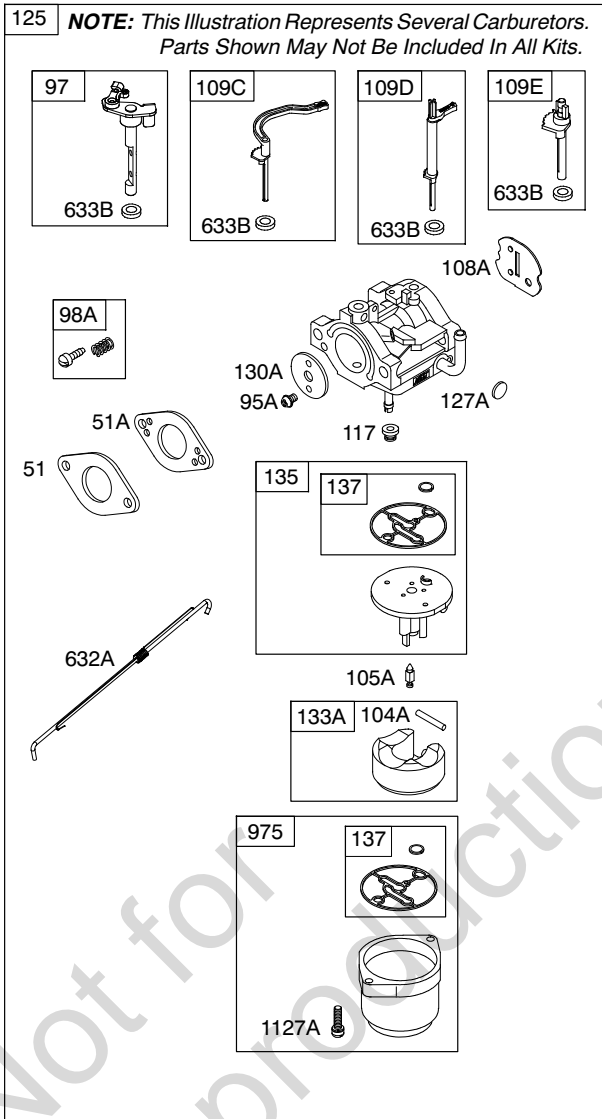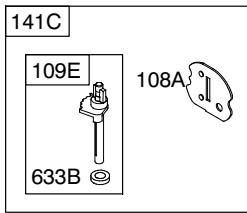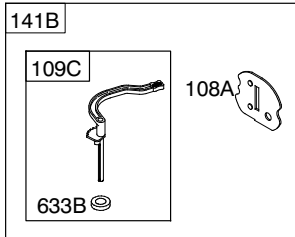
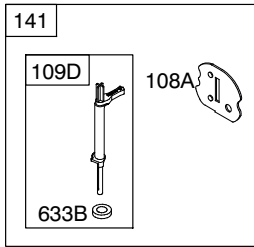


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10003-4 Assemblies include all parts shown in frames. 03/15/2013

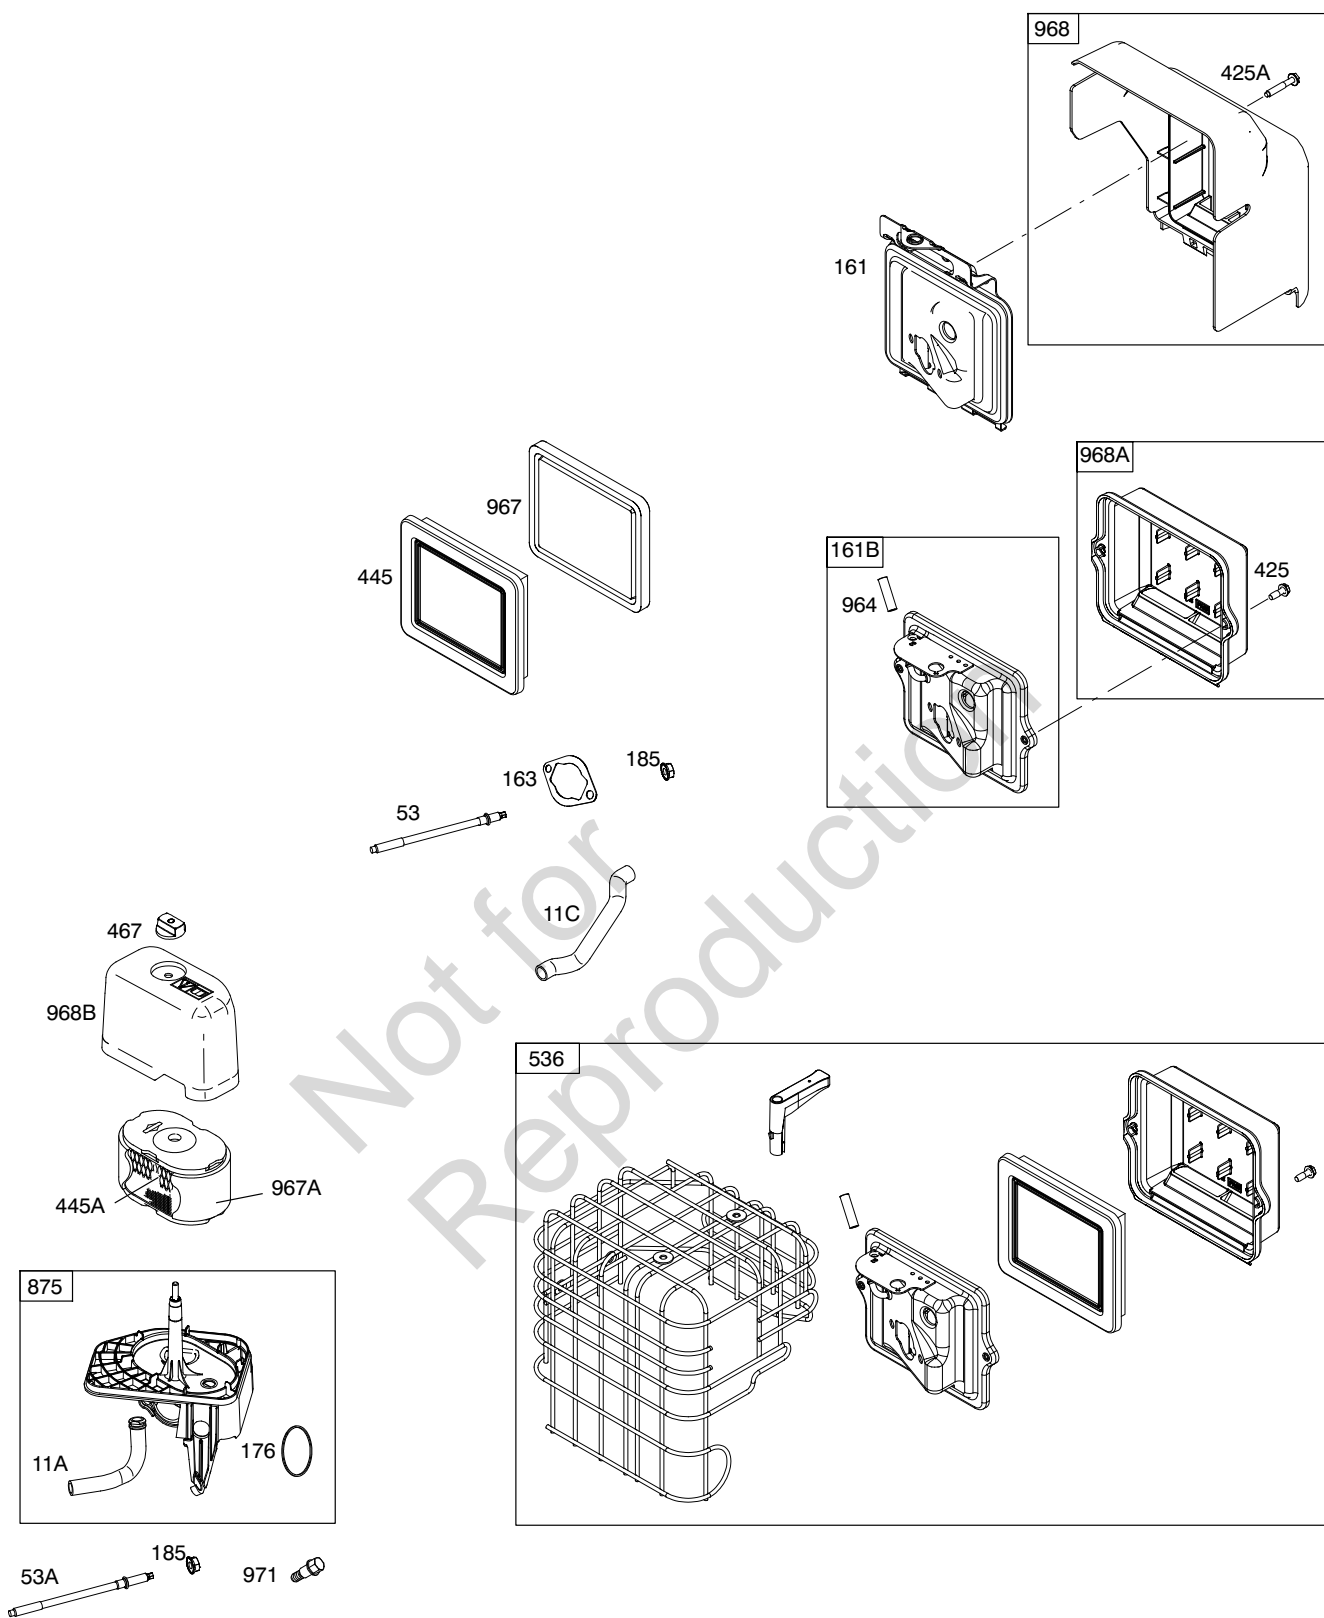


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10003-5 Assemblies include all parts shown in frames. 03/15/2013

 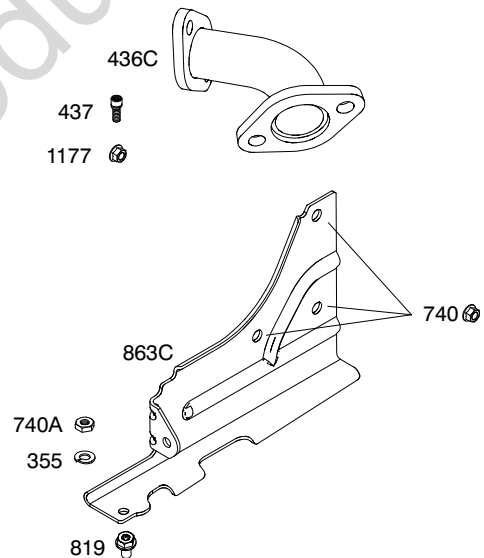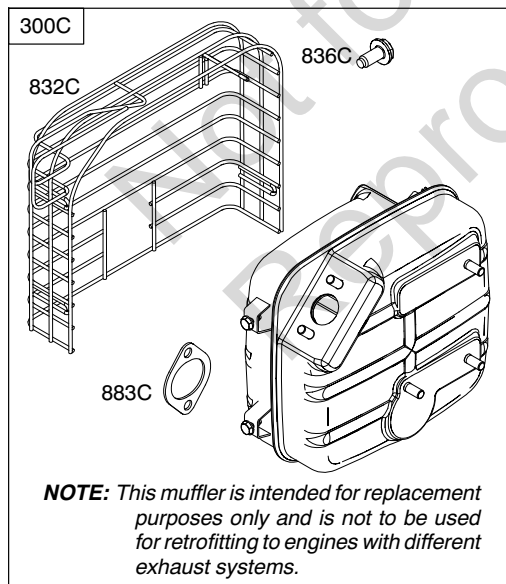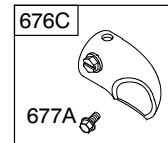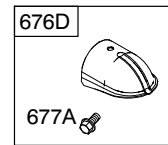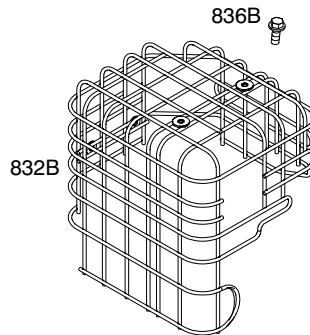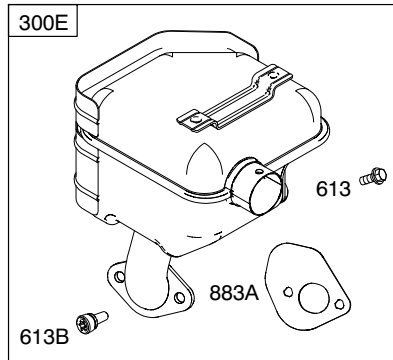

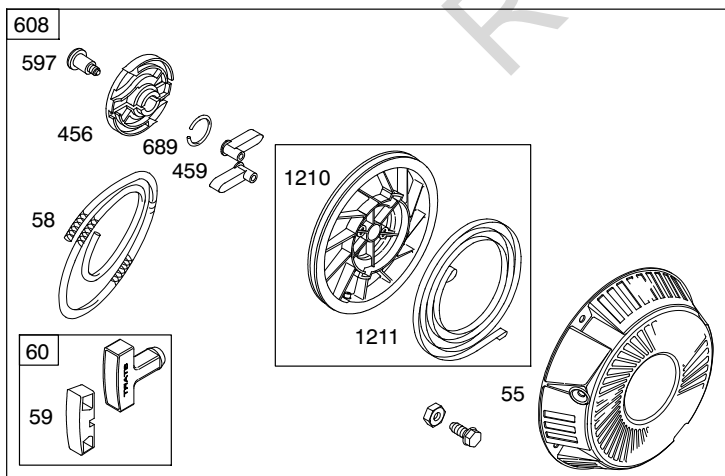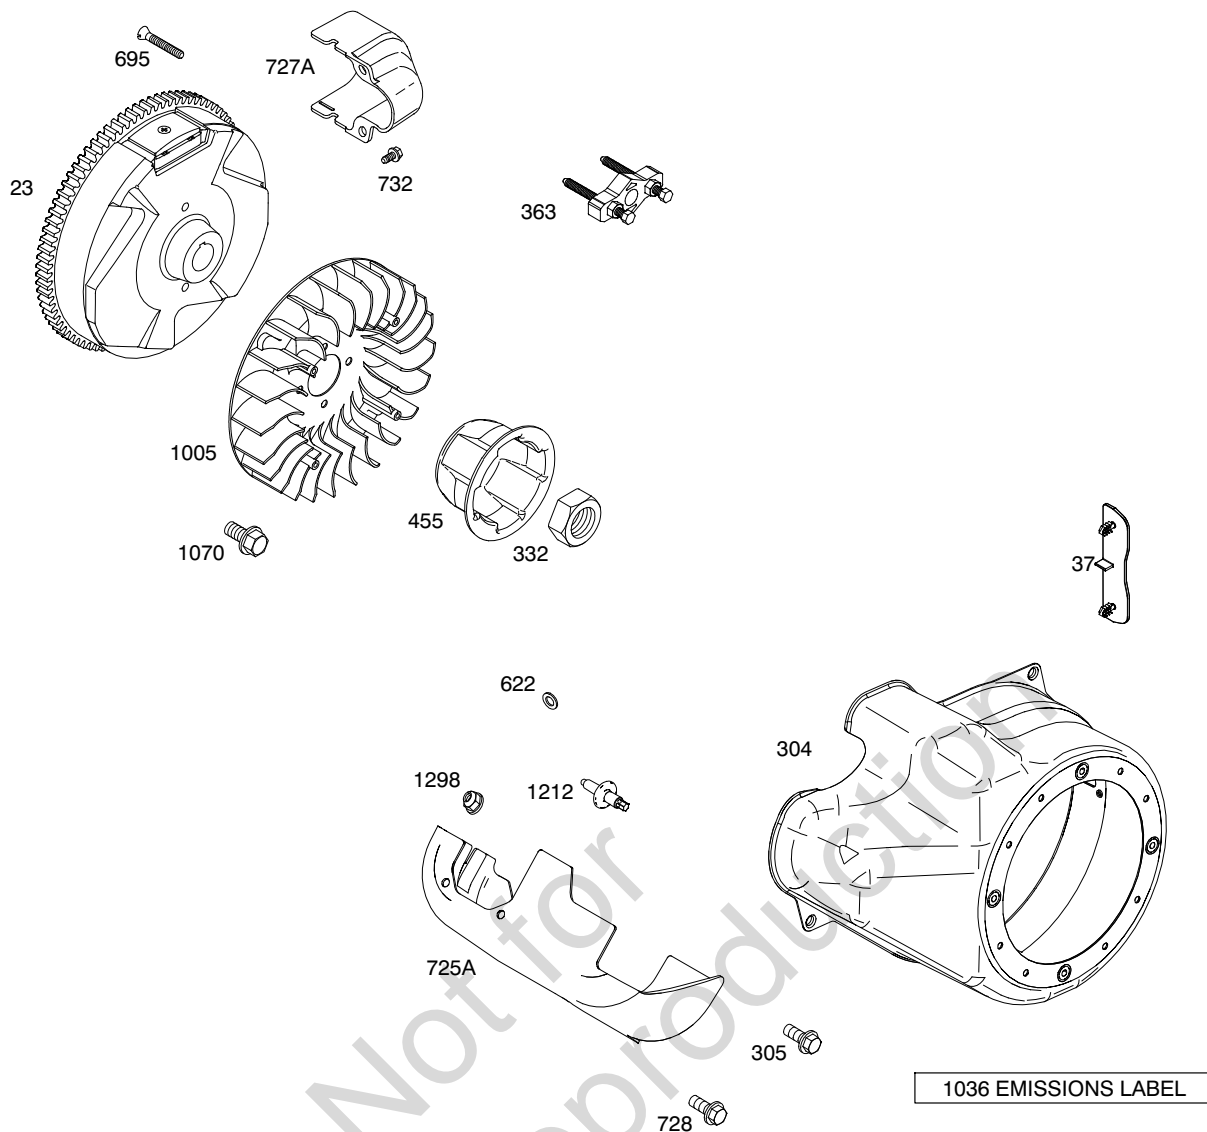


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10003-7 Assemblies include all parts shown in frames. 03/15/2013

20S200

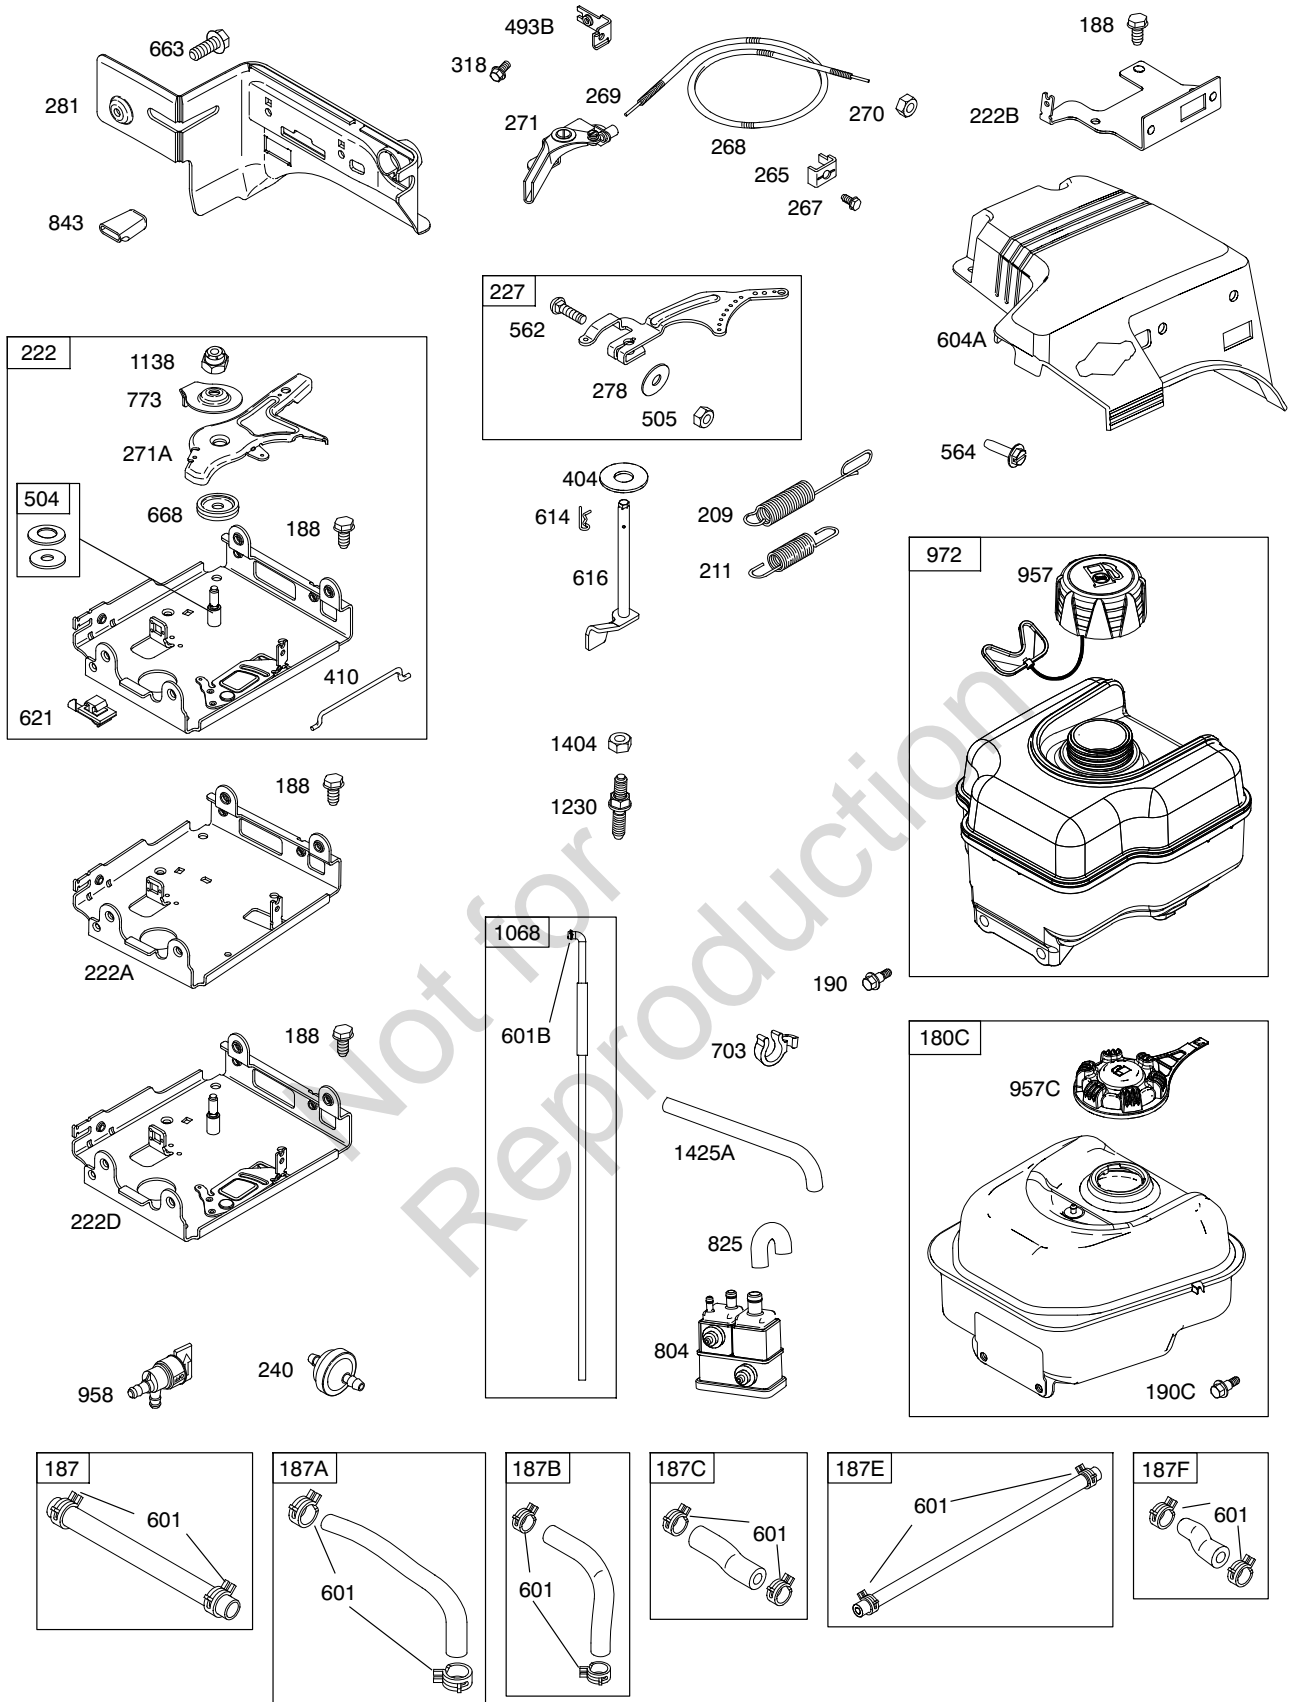



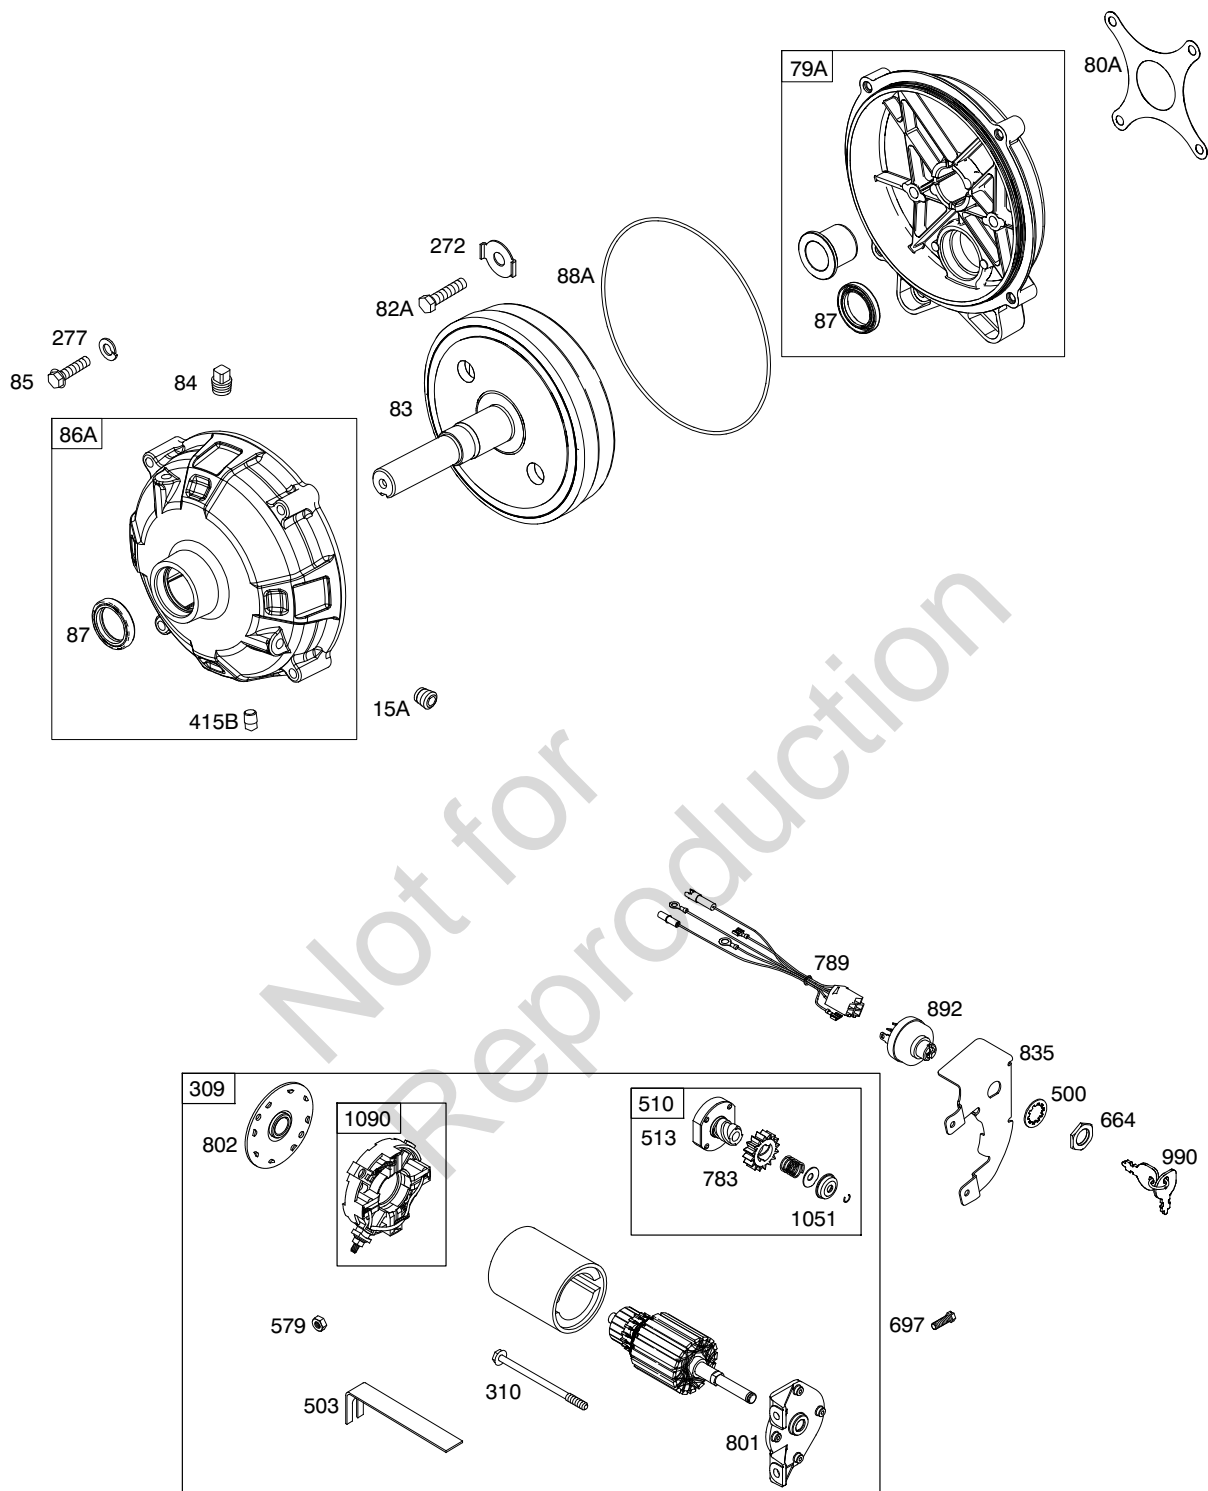





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10003-8 Assemblies include all parts shown in frames. 03/15/2013



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10003-9 Assemblies include all parts shown in frames. 03/15/2013

 20S200

DC ONLY	10-16 AMP			
<div data-bbox="154 241 219 273" data-label="Text">474A</div> 	<div data-bbox="341 241 406 273" data-label="Text">474D</div> 			
<div data-bbox="162 483 893 567" data-label="Text"> <p>NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.</p> </div>				
<div data-bbox="203 619 284 651" data-label="Text">1119</div> 	<div data-bbox="373 619 430 651" data-label="Text">578</div> 	<div data-bbox="552 598 609 630" data-label="Text">526</div> <div data-bbox="552 640 609 672" data-label="Text">501</div> 	<div data-bbox="1242 567 1299 598" data-label="Text">1046</div> 	<div data-bbox="1242 661 1299 693" data-label="Text">347</div> 

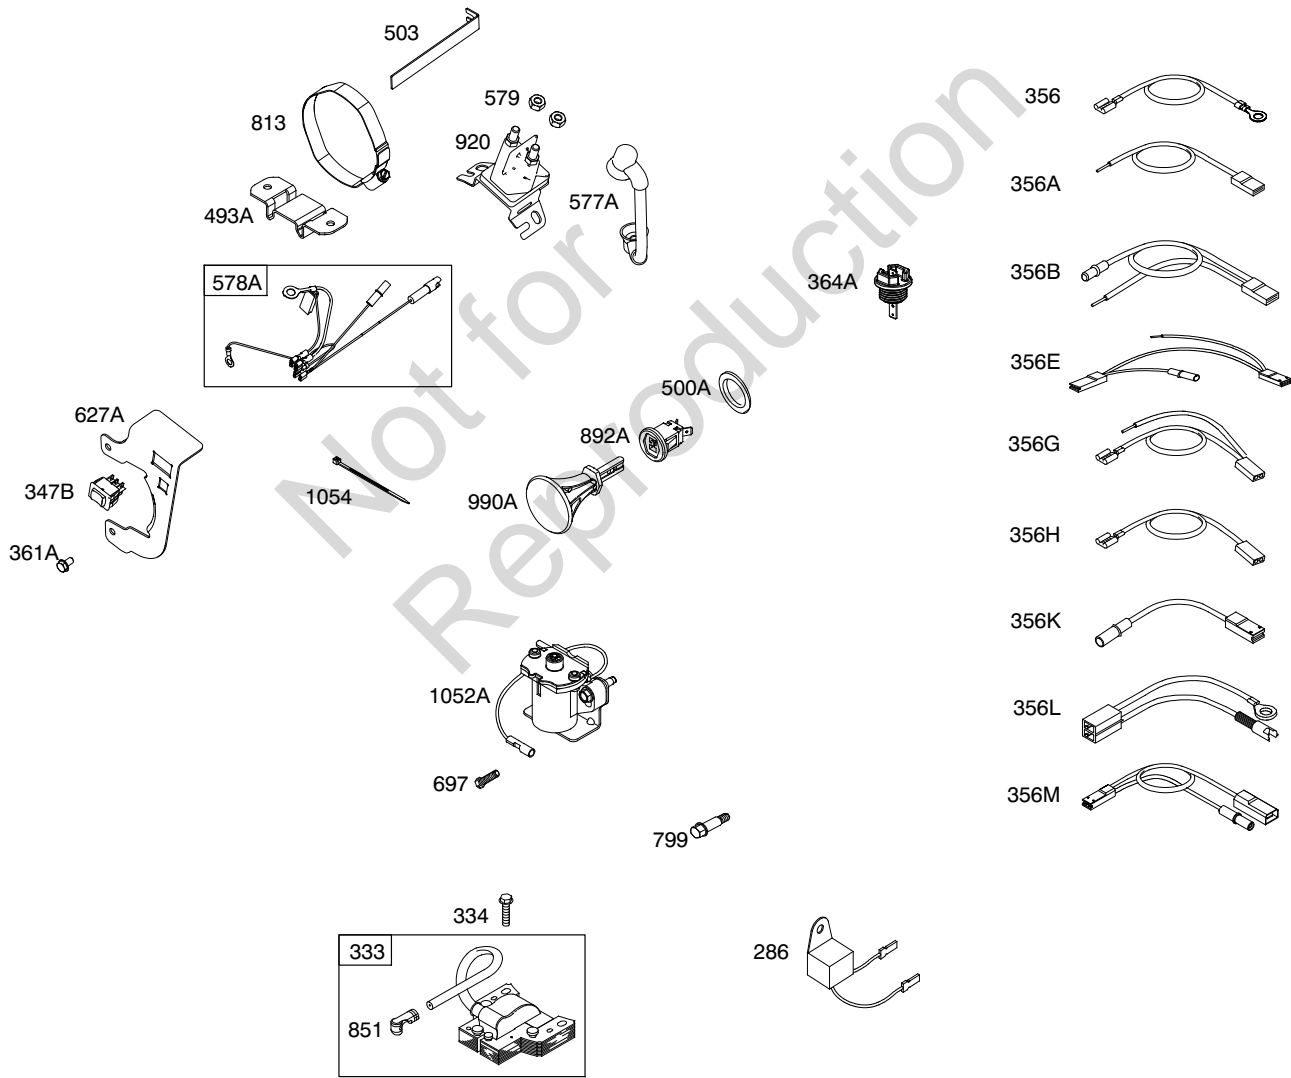

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 10003-10 Assemblies include all parts shown in frames. 03/15/2013

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	794849	Cylinder Assembly	21	281658s	Cap-Oil Fill	51	694874	Gasket-Intake
2	698340	Kit-Bushing/Seal (Magneto Side)	22	794825	Screw (Crankcase Cover/Sump)	51A	694875	Gasket-Intake
3	391086s	Seal-Oil (Magneto Side)	23	794812	Flywheel	53	794830	Stud (Carburetor)
5	799859	Head-Cylinder			Used on Type No(s). 0041, 0042, 0050, 0109, 0113, 0120, 0123, 0124, 1116, 1197, 1216, 1322, 1533.	53A	794831	Stud (Carburetor) Used on Type No(s). 1116, 1197.
7	694872	Gasket-Cylinder Head			----- Note -----	55	695288	Housing-Rewind Starter
11A	695305	Tube-Breather			794814 Flywheel	58	693389	Rope-Starter
11C	696796	Tube-Breather			Used on Type No(s). 0035, 0036, 0037, 0038, 0049, 0063, 0108, 0112, 0117, 0118, 0121, 0122, 0127, 1124, 1127, 1151, 1194, 1246, 1309.	59	805957	Insert-Grip
12	694953	Gasket-Crankcase			----- Note -----	60	490652	Grip-Starter Rope
13	794829	Screw (Cylinder Head)			794814 Flywheel	65	699228	Screw (Rewind Starter)
15	691686	Plug-Oil Drain			Used on Type No(s). 0035, 0036, 0037, 0038, 0049, 0063, 0108, 0112, 0117, 0118, 0121, 0122, 0127, 1124, 1127, 1151, 1194, 1246, 1309.	79A	794816	Case-Gear Reduction
15A	691682	Plug-Oil Drain			----- Note -----	80A	793588	Gasket-Gear Case
16	794716	Crankshaft Used on Type No(s). 0036, 0041, 0112, 0127, 1151, 1216, 1246.	24	222698s	Key-Flywheel	82A	690287	Screw (Gear Reduction Case)
		----- Note -----	25	792117	Piston Assembly (Standard)	83	690387	Shaft-Auxiliary Drive
		794717 Crankshaft Used on Type No(s). 0037, 0042, 0108, 0109, 0123, 1116, 1127, 1322.			----- Note -----	84	691121	Plug-Breather
		794718 Crankshaft Used on Type No(s). 0038, 0113, 0117, 0118, 0120, 1194, 1309.	26	792026	Ring Set (Standard)	85	794820	Screw
		794719 Crankshaft Used on Type No(s). 0035.			----- Note -----	86A	793591	Cover-Gear
		794720 Crankshaft Used on Type No(s). 0063, 1124, 1533.	27	690975	Lock-Piston Pin	87	391086s	Seal-Gear Reduction
		794721 Crankshaft Used on Type No(s). 0049, 0050, 0121, 0122, 0124, 1197.	28	696581	Pin-Piston	88A	793589	Gasket-Gear Reduction Cover
17	695434	Ball-Bearing	29	694691	Rod-Connecting	95A	690718	Screw (Throttle Valve)
18	791412	Cover-Crankcase ----- Note -----	30	694692	Dipper-Connecting Rod	97	796334	Shaft-Throttle
		792139 Cover- Crankcase Used on Type No(s). 0049, 0050, 0121, 0122, 0124, 1197.	32	690976	Screw (Connecting Rod)	98A	695408	Kit-Idle Speed
19	698340	Kit-Bushing/Seal (PTO Side)	33	697576	Valve-Exhaust (Chrome)	104A	694918	Pin-Float Hinge
20	391086s	Seal-Oil (PTO Side)	34	792200	Valve-Intake	105A	696136	Valve-Float Needle
			35	694865	Spring-Valve (Intake)	108A	696143	Valve-Choke
			36	694865	Spring-Valve (Exhaust)	109C	790148	Shaft-Choke
			37	795715	Guard-Flywheel	109D	790149	Shaft-Choke
			42	499586	Keeper-Valve	109E	696735	Shaft-Choke
			45	690977	Tappet-Valve	117	796080	Jet-Main (Standard)
			46	795697	Camshaft	118	796128	Jet-Main (High Altitude)
						121	796137	Kit-Carburetor Overhaul
						122	694876	Spacer-Carburetor
						125	796321	Carburetor
						127A	690727	Plug-Welch
						130A	696139	Valve-Throttle
						133A	694914	Float-Carburetor
						135	698780	Tube-Fuel Transfer
						137	698781	Gasket-Float Bowl
						141	696145	Kit-Choke Shaft
						141B	696144	Kit-Choke Shaft
						141C	699979	Kit-Choke Shaft
						146	690979	Key-Timing

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

20S200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161		Base-Air Cleaner (Metal) (No Longer Available) (For Replacement, Order Reference 536)	222	795739	Bracket-Control Used on Type No(s). 0109, 0112.	281	697268	Panel-Control
161B	591217	Base-Air Cleaner (Metal)			----- Note ----- 794799 Bracket- Control	286	793696	Module-Oil Sensor
163	692277	Gasket-Air Cleaner			Used on Type No(s). 0035, 0036, 0037, 0041, 0042, 0049, 0050, 0063, 0108, 0121, 0122, 0123, 0124, 0127, 1116, 1124, 1127, 1151, 1197, 1216, 1246, 1322, 1533.	287	699234	Screw (Dipstick Tube)
170	794833	Stud (Crankcase Cover/Sump)	222A	794801	Bracket-Control Used on Type No(s). 0038, 0118, 0120, 1309.	300C	793701	Muffler (This muffler is intended for replacement purposes only and is not to be used for retrofitting to engines with different exhaust systems)
176	691917	Seal-O Ring (Air Cleaner Base)	222B	794804	Bracket-Control Used on Type No(s). 0117, 1194.	300E	794949	Muffler
180C	795705	Tank-Fuel (Metal) Used on Type No(s). 0109, 0112, 0113.	222D	795991	Bracket-Control Used on Type No(s). 0113.	304	591545	Housing-Blower (Used After Code Date 12012300) ----- Note ----- 795699 Housing- Blower (Used Before Code Date 12012400) 591933 Housing- Blower (Used After Code Date 12012300) Used on Type No(s). 0109, 0112, 0113.
185	794838	Nut (Air Cleaner Base)	227	694864	Lever-Governor Control			
187	791766	Line-Fuel (15 Inches Long) (Cut To Required Length)	240	394358S	Filter-Fuel			
187A	791869	Line-Fuel	265	691024	Clamp-Casing			
187B	791834	Line-Fuel	267	699492	Screw (Casing Clamp)			
187C	791871	Line-Fuel	268	691025	Casing-Control Wire			
187E	791745	Line-Fuel (23 Inches Long) (Cut To Required Length)	269	691026	Wire-Control			
187F	795046	Line-Fuel	270	691027	Nut (Control Wire Casing)			
188	699479	Screw (Control Bracket)	271	691028	Lever-Control	305	699481	Screw (Blower Housing)
190	699220	Screw (Fuel Tank)	271A	695381	Lever-Control	306	697240	Shield-Cylinder
190C	795047	Screw (Fuel Tank) Used on Type No(s). 0109, 0112, 0113.	272	691168	Lock-Screw Head	307	794822	Screw (Cylinder Shield)
192	690083	Adjuster-Rocker Arm	277	794842	Washer (Gear Case To Gear Reduction)	309	695479	Motor-Starter
209	694867	Spring-Governor ----- Note ----- 696638 Spring- Governor Used on Type No(s). 0108, 1127, 1246.	278	798196	Washer (Governor Control Lever) (Used After Code Date 09101800). ----- Note ----- 792008 Washer (Governor Control Lever) (Used Before Code Date 09101900).	310	690323	Screw (Starter Motor)
211	695307	Spring-Governed Idle				318	699234	Screw (Mounting Bracket) (Remote Choke)
219	693578	Gear-Governor				332	794824	Nut (Flywheel)
220	691724	Washer (Governor Gear)				333	492341	Armature-Magneto
						334	699477	Screw (Magneto Armature)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10003-12 Assemblies include all parts shown in frames. 03/15/2013

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	491055s	Plug-Spark ----- Note ----- 691043 Plug-Spark Used on Type No(s). 0035, 0036, 0037, 0038, 0041, 0042, 0049, 0050, 1533. 792015 Plug-Spark Used on Type No(s). 0108.	445	491588s	Filter-Air Cleaner Cartridge	529	791822	Grommet
347	697854	Switch-Rocker ----- Note ----- 795333 Switch-Rocker Used on Type No(s). 0038, 0108.	445A	695302	Filter-Air Cleaner Cartridge	536	591546	Cleaner-Air
347B	790949	Switch-Rocker Used on Type No(s). 0041, 0042, 0050, 0109, 0123, 1116, 1197.	455	794867	Cup-Flywheel	552	694674	Bushing-Governor Crank
355	794842	Washer (Muffler Bracket)	456	692299	Plate-Pawl Friction	562	798197	Bolt (Governor Control Lever) (Used After Code Date 09101800). ----- Note ----- 793216 Bolt (Governor Control Lever) (Used Before Code Date 09101900).
356	695630	Wire-Stop	474A	695730	Alternator (3 Amps DC) Used on Type No(s). 0113, 0120, 1322, 1533.	564	699492	Screw (Control Cover) (18.67 mm Long)
356A	692390	Wire-Stop	474D	695466	Alternator (10 Amp Regulator) Used on Type No(s). 0041, 0042, 0050, 0109, 0123, 0124, 1116, 1197, 1216.	577A	690795	Cable Starter
356B	699340	Wire-Stop	493A	691177	Bracket-Mounting	578	692306	Wire-Assembly
356E	696328	Wire-Stop	493B	794782	Bracket-Mounting (Remote Choke)	578A	790948	Wire Assembly
356G	697336	Wire-Stop	500	691086	Washer (Key Switch)	579	691029	Nut (Starter Cable)
356H	795332	Wire-Stop	500A	792613	Washer (Key Switch)	597	691696	Screw (Pawl Friction Plate)
356K	697397	Wire-Stop	501	845907	Regulator	601	791850	Clamp-Hose
356L	792609	Wire-Stop	503	691532	Strap-Starter	601B	795230	Clamp-Hose
356M	794290	Wire-Stop	504	695383	Washer Set-Friction	604A	791752	Cover-Control
358	695438	Gasket Set-Engine	505	793515	Nut (Governor Control Lever) (Used After Code Date 09101800). ----- Note ----- 691251 Nut (Governor Control Lever) (Used Before Code Date 09101900).	608	695287	Starter-Rewind
361A	691693	Screw (Starting Switch)				613	794846	Screw (Muffler)
363	19203	Puller-Flywheel				613B	794844	Screw (Muffler)
364A	699947	Terminal-Oil Plug				614	691620	Pin-Cotter (Governor Crank)
383	19576s	Wrench-Spark Plug				616	795758	Crank-Governor
404	795759	Washer (Governor Crank)				621	692310	Switch-Stop
410	695382	Link-Control				622	794839	Washer (Heat Shield)
415	691363	Plug				627A	792608	Panel
415B	794903	Plug	510	693699	Drive-Starter	632A	796324	Link-Throttle
425	794836	Screw (Air Cleaner Cover)	513	692024	Clutch-Drive	633B	690998	Seal-Choke/Throttle Shaft
425A	794835	Screw (Air Cleaner Cover)	522	697689	Plug-Dipstick/Fill	635	691909	Boot-Spark Plug
436C	792374	Manifold-Exhaust	523	695344	Dipstick	663	699492	Screw (Control Panel)
437	794844	Screw (Exhaust Manifold)	524	691876	Seal-Dipstick Tube	664	691087	Nut (Key Switch)
			525	695343	Tube-Dipstick			
			526	690297	Screw (Regulator)			

20S200

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
668	694257	Spacer (Control Bracket)	825	795226	Hose-Air	1005	794815	Fan-Flywheel
676C	697816	Deflector-Muffler	832B	590767	Guard-Muffler	1022	690971	Gasket-Rocker Cover
676D	794213	Deflector-Muffler	832C	792380	Guard-Muffler	1023	697691	Cover-Rocker
677A	699776	Screw (Muffler Deflector)	835	797458	Bracket-Wire Harness	1026	592673	Rod-Push
689	691855	Spring-Friction	836B	699234	Screw (Muffler Guard)	1029	690972	Arm-Rocker
695	698807	Screw (Ring Gear)	836C	710023	Screw (Muffler Guard)	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
697	795026	Screw (Drive Cap)	842	691031	Seal-O Ring (Dipstick Tube)	1046	691337	Plug-Blower Housing
703	795222	Clip	843	695588	Sleeve-Lever	1051	691265	Ring-Retaining
718	690959	Pin-Locating	847	695342	Dipstick/Tube Assembly	1052A	794805	Sensor-Oil
718A	695178	Pin-Locating	851	692424	Terminal-Spark Plug	1054	280275	Tie-Cable
725A	795886	Shield-Heat (Used After Code Date 11020600)	863C	793700	Bracket-Muffler	1058	277040	Manual-Operator's
		----- Note -----	868	690968	Seal-Valve	1068	795740	Hose-/Clamp Assembly
		792995 Shield-Heat (Used Before Code Date 11020700)	875	797667	Base-Air Cleaner (Plastic)	1070	794821	Screw (Flywheel Fan)
727A	697465	Cover-Starter Drive	883A	794818	Gasket-Exhaust	1090	691293	Retainer-Brush
728	699481	Screw (Heat Shield)	883C	710250	Gasket-Exhaust	1095	695440	Gasket Set-Valve
732	699200	Screw (Starter Drive Cover)	892	692318	Switch-Key	1100	791959	Pivot-Rocker Arm
740	710090	Nut (Muffler Bracket)	892A	791944	Switch-Key	1119	699772	Screw (Alternator)
740A	794843	Nut (Muffler Bracket)	914	794827	Screw (Rocker Cover)	1127A	695407	Screw (Float Bowl)
741	691288	Gear-Timing	920	691656	Solenoid-Starter	1138	694255	Nut (Control Bracket)
742	692564	Retainer-E Ring	957	799719	Cap-Fuel Tank (Plastic)	1171	794828	Stud (Rocker Cover)
746	694679	Gear-Idler	957C	795221	Cap-Fuel Tank (Plastic)	1177	710090	Nut (Muffler)
773	694258	Retainer	958	698180	Valve-Fuel Shut Off (Plastic)	1194	691876	Seal-O Ring (Plug)
783	693713	Gear-Pinion	964	799159	Cap-Connector	1210	498144	Pulley/Spring Assembly (Pulley)
789	797457	Harness-Wiring	967	491435s	Filter-Pre Cleaner	1211	498144	Pulley/Spring Assembly (Spring)
798	697890	Screw (Rocker Arm)	967A	695303	Filter-Pre Cleaner Cover-Air Cleaner (No Longer Available) (For Replacement, Order Reference 536)	1212	794841	Stud (Blower Housing)
799	794937	Screw (Oil Sensor) (Shoulder Screw)	968		Cover-Air Cleaner	1230	794840	Stud (Control Bracket)
		----- Note -----	968A	794784	Cover-Air Cleaner	1298	794838	Nut (Heat Shield)
		699233 Screw (Oil Sensor)	968B	695301	Cover-Air Cleaner	1319	794467	Label-Warning
801	694482	Cap-Drive	971	794837	Screw (Air Cleaner Base to Carburetor)	1319A	797669	Label-Warning
802	691286	Cap-End	972	799863	Tank-Fuel (Plastic)	1330	276781	Repair Manual
804	795223	Canister-Carbon (EVAP)	975	698783	Bowl-Float	1404	794838	Nut (Control Cover)
813	690635	Clamp	990	691959	Key Set	1425A	795741	Hose-Purge Line
819	794832	Screw (Muffler Bracket)	990A	794696	Key Set			
			994	790153	Arrestor-Spark			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10003-14 Assemblies include all parts shown in frames. 03/15/2013

Not for
Reproduction

Not for
Reproduction

